


©University and State of Wisconsin. All Rights Reserved. University of Wisconsin System

STIEN BUILDING FIRST FLOOR

University of Wisconsin Stevens Point
1925 Maria Drive
Stevens Point, WI

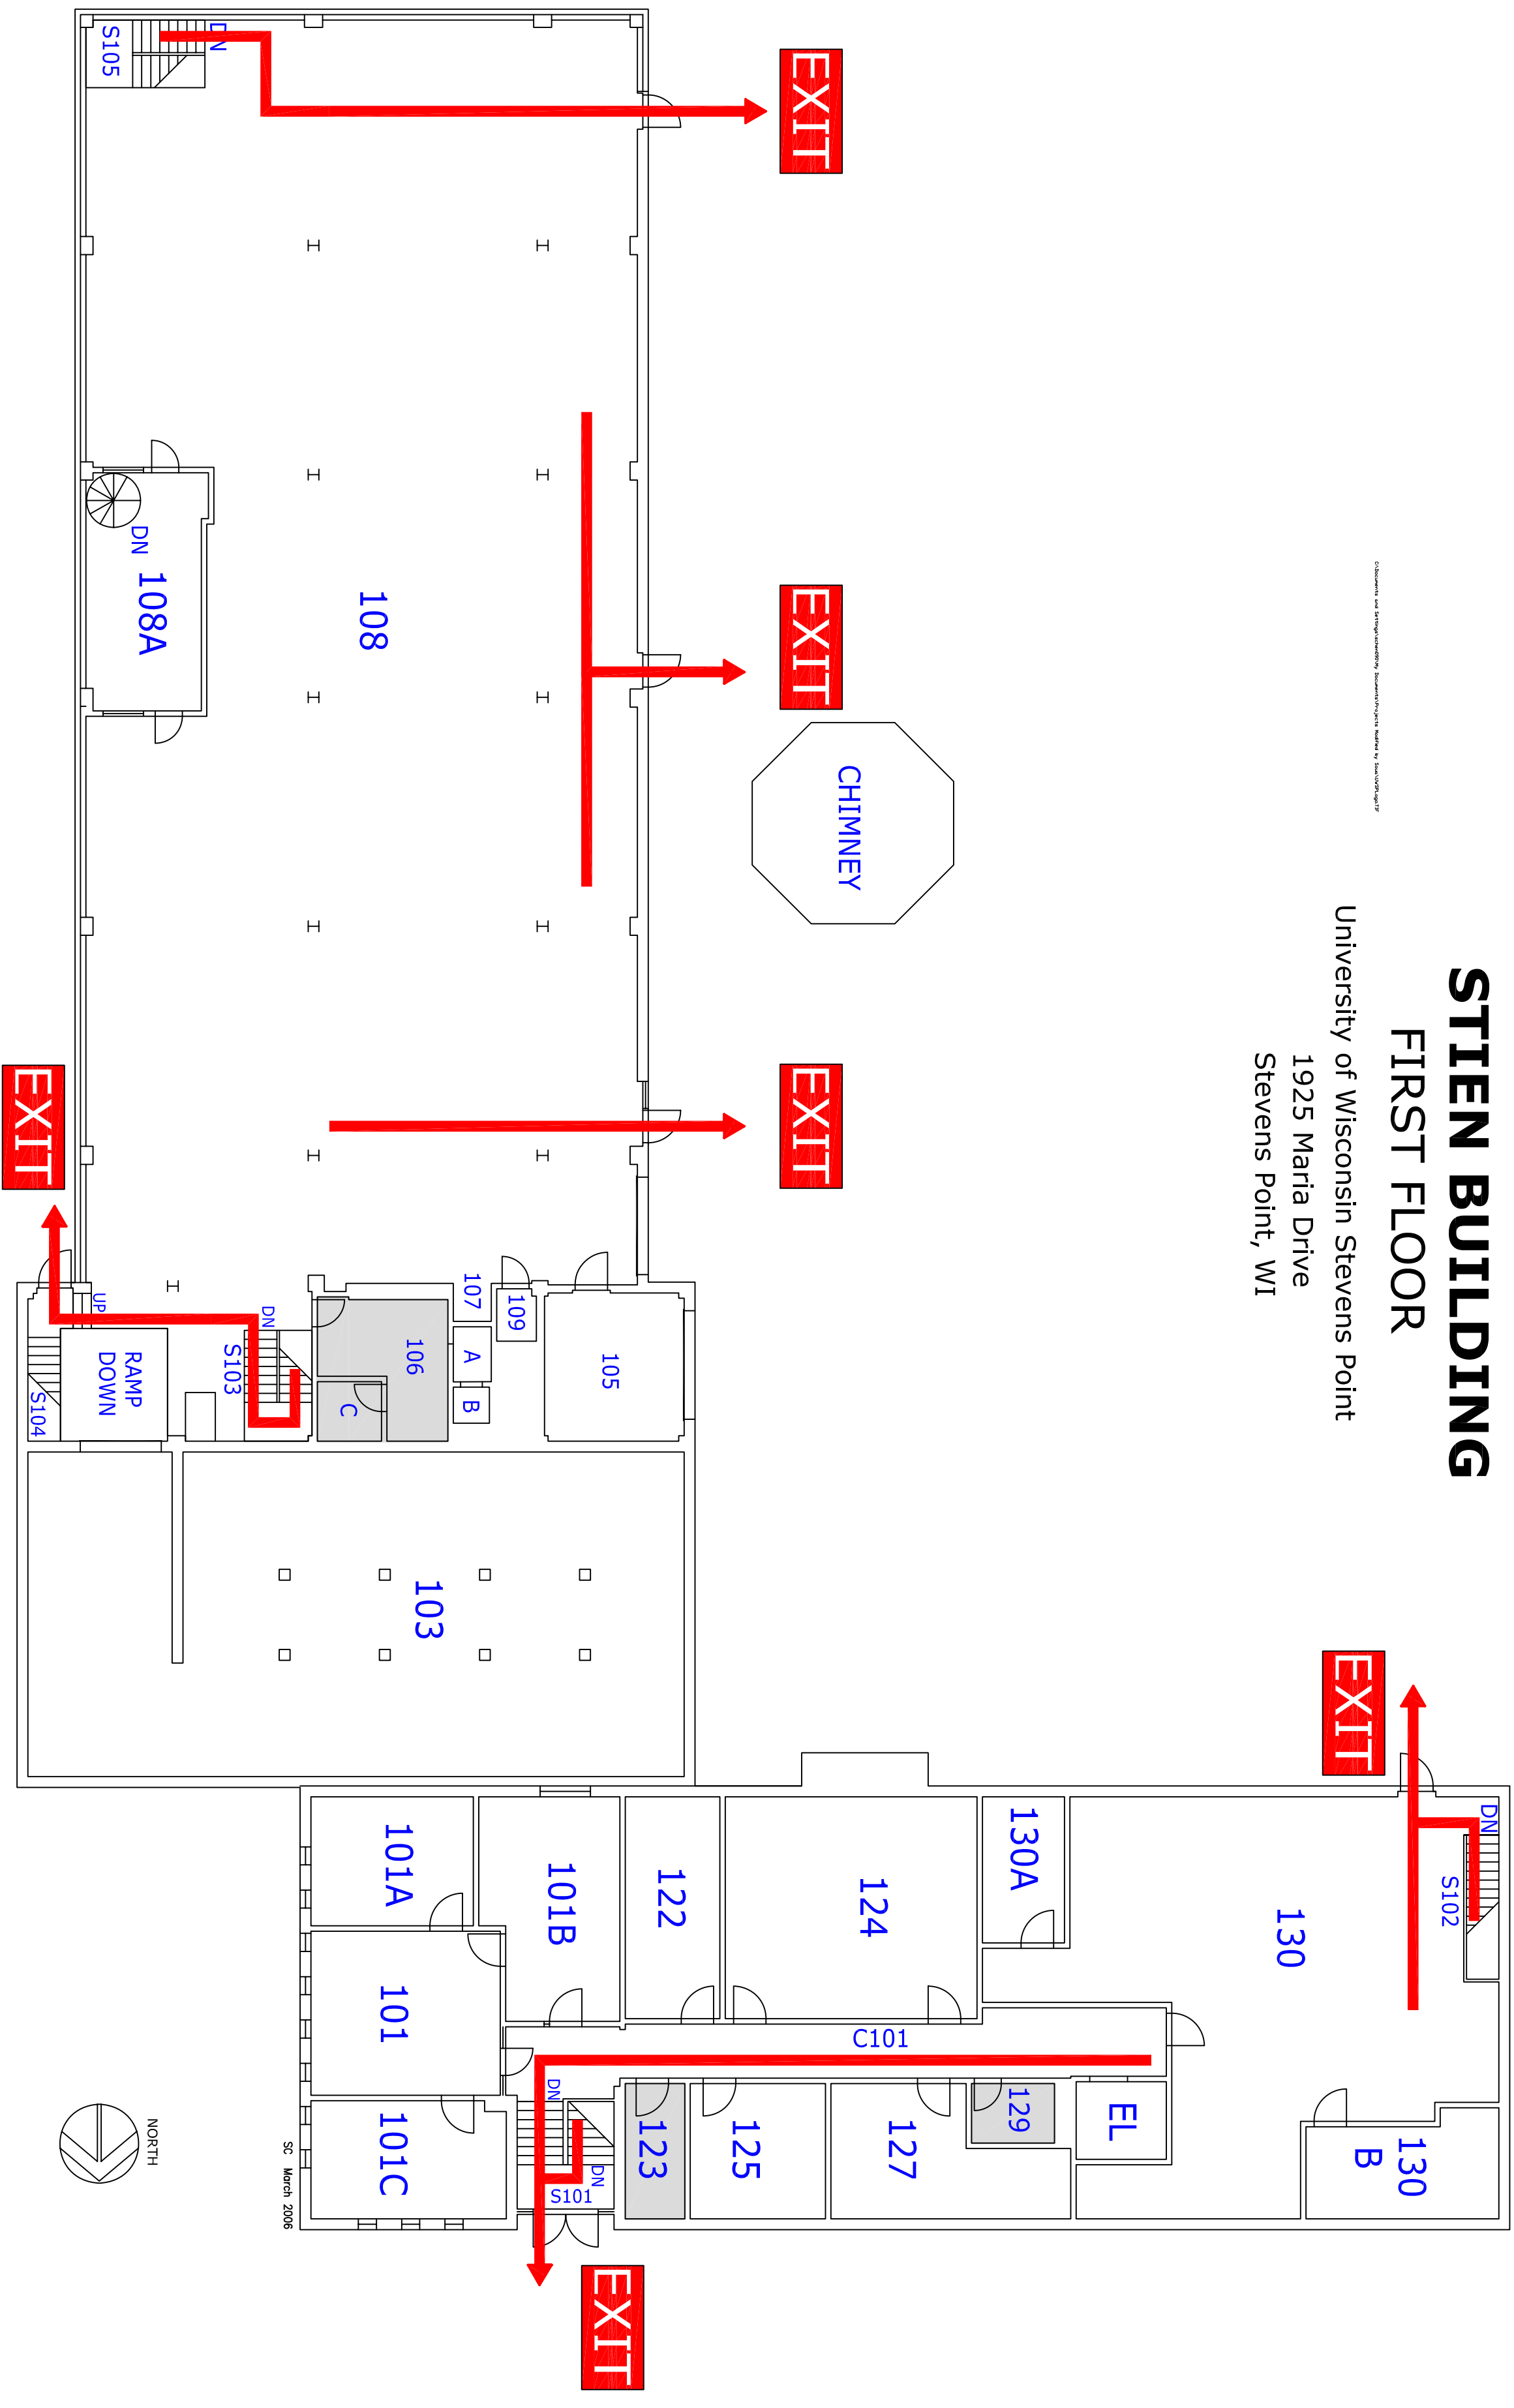

UWSP Emergency Plan

Arrows Denote Building Evacuation Routes.

Shaded Areas Represent Tornado/
Severe Weather Shelter Areas.

Shelter Areas Are Located On
Floors 0 and 1 Of This Building.

KEY

YOU ARE HERE

EMERGENCY PHONE

AED

SHADED AREA = SEVERE WEATHER/ TORNADO SHELTER

EVACUATION ROUTES

WHAT TO DO DURING:

TORNADO/ SEVERE WEATHER
 Notification of a severe weather event will be relayed to the building's fire sirens. In the event of a severe weather shelter, building occupants should take cover in the lowest safe location available, preferably in an interior room or basement. Remain in your shelter area until tornado warning is expired.

FIRE
 Pull a fire alarm and EVACUATE the building in the event of a fire. Before opening a door, feel if it is warm. If it is warm, leave the door closed and find an alternate path. Stay low if you encounter smoke. Stop, drop, and roll should your clothes catch fire.

EVACUATION
 Remain calm. Use stairs and not elevators. Pay close attention to your surroundings as you exit. Incidents such as FIRE or HAZARDOUS MATERIALS RELEASES may require that alternate paths be selected. Key design of the building and entry ways facilitate responder access to the emergency.

Call 911 for all Emergencies.

There will seem to be a 10 second delay, but **STAY ON THE LINE!**

Meet first responder for directions.

See UWSP Emergency Management Plan at <http://www.uwsp.edu/ehs/emp/> for details on all emergencies.

Contact Protective Services at 346-3456 for additional questions.